

HOW DO I USE AND CARE FOR MY NEW SEX TOY?

Our products should be used as tools for sexual pleasure both alone and with a partner, or for the purposes of personal stimulation and massage.

This user's guide aims to give you practical information and advice so that you can properly use and care for your new sex toy (both battery-operated models and non-battery-operated models).

BATTERIES

- Check to see if batteries are included with the product, as well as the number of batteries needed to operate it.
- Only use new batteries. Never mix new and used batteries.
- Make sure that the battery contacts are clean and dry.
- Open the battery compartment and follow the instructions closely to properly insert the batteries, respecting their polarity (+ and -).
- If batteries are included with the product and are already inserted in the battery compartment, peel off the plastic cover to allow the batteries to power the product.
- Never insert any metal items or any other objects into the battery compartment.
- Close the battery compartment carefully, especially in the case of waterproof items.
- We recommend that you remove your sex toy's batteries after every use, in order to extend their lifespan and to prevent all risk of oxidation inside the toy.
- Do not dispose of the batteries in the garbage or waste containers.
- Please dispose of your batteries in the proper public disposal units for this purpose.

STARTING AND USING YOUR SEX TOY

- Before using your toy for the first time, clean it in warm soapy water in order to eliminate any residue that may be left over from manufacturing. Take care not to get the battery compartment wet, and always dry your toy thoroughly before using it.
- Lubricate your toy properly by using an appropriate lubricant, taking care to avoid the control panel (buttons, dials, switches, remote control, etc.) and the battery compartment.
- **IMPORTANT:** Only use a water-based lubricant. Oil-based lubricants can damage the surface of the toy.
- Press the on-off button, or carefully turn on the speed-control dial to start up your toy.
- Adjust the speed of vibration, or select the desired function on the control panel (buttons, dials, switches, remote control, etc).
- Always use a light hand when turning, pressing, or pushing the speed adjustor.
- Turn off your sex toy after each use by pressing on the on-off button, by carefully turning the dial in the opposite direction, or by pushing on the speed adjustor several times until the toy is turned completely off.

CARING FOR YOUR SEX TOY

- After each use, allow your toy to cool before putting it away.
- Clean your toy with an appropriate cleaner or at the very least with warm soapy water.
- Keep your toy in a clean, dry place, free from humidity, heat, or frost.
- Store your toy in its box or in a case to avoid potentially harmful interactions with other objects

CAUTION

- Keep your toy away from children.
- Sex toys are not recommended for pregnant women.
- Do not use your toy in cases of illness, irritation, skin or membrane infections.
- In order to avoid the risk of STDs and infections, do not share your toys with others.
- For non-waterproof sex toys, make sure that the batteries and control panel do not get damp.
- When using waterproof sex toys, always make sure that the battery compartment is firmly closed.
- If your sex toy becomes overheated, turn it off immediately and let it cool before using it again.
- Handle and use your sex toy with the utmost of care to avoid any accidents.
- Use your toy only as a tool for sexual pleasure, alone or with a partner, or for the purposes of personal stimulation or massage. The user is entirely responsible for adverse incidents occurring due to non-recommended uses.

